

How to Fit


a Grip Fit Roller Blind

FITTING GRIP FIT

Once you have opened your blind, simply raise the cassette into your recess at an angle, level it out and fold the the bracket levers down to lock in place. Now you can insert the blind into the cassette idle end first. Slide out the bracket covers and operate your blind. (See figures 6 & 7)

The system works using a specially developed rubber compound and a clever bracket system to push out on your recess.

ADJUSTING THE CASSETTE FIT IF IT IS TOO TIGHT (Minus adjustment)

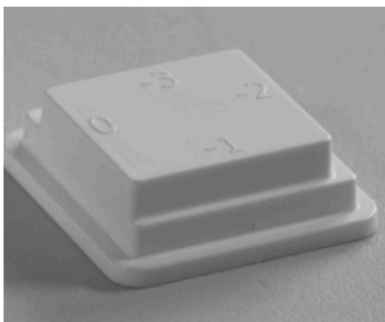

Minus adjustment block

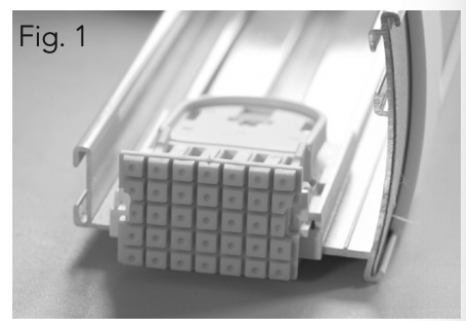
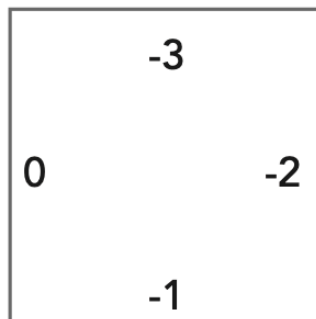


Fig. 1

Fold both lever brackets up on the cassette, remove the cassette from the window recess and lie flat. (Fig.1)

LEFT SIDE OF THE CASSETTE

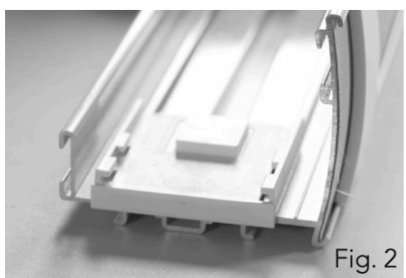


Fig. 2

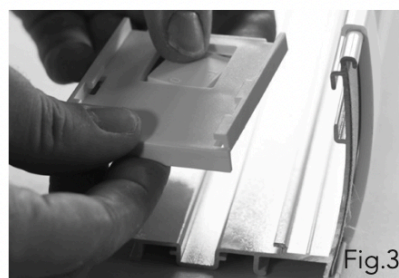


Fig.3

Slide the mounting plate out of the left side of the cassette (Fig.2) and remove the adjustment block (Fig.3) Rotate the adjustment block by up to -1, -2 or -3 clockwise.



Fig. 4
Slide the adjustment block and mounting plate back into the cassette and refit the lever bracket. (Fig.4 & 5)



Fit the cassette back into the recess ensuring it is a snug fit and fold the lever brackets down to secure the blind. (Fig.6 & 7)

WARNING

Young children can be strangled by loops in pull cords, chains, tapes and inner cords that operate the product. To avoid strangulation and entanglement, keep cords out of the reach of young children. Cords may become wrapped around a child's neck. Move beds, cots and furniture away from window covering cords. Do not tie cords together. Make sure cords do not twist and create a loop.

