


Inside Recess

Using a steel tape measure, take a measurement in mm across the width of the recess **top, middle and bottom** and jot down the smallest size. Do the same for the drop of the recess.

Watch out for **obstructions** such as tiles and dado rails.

Enter the sizes online and choose '**recess size**' in the options. We will make all the necessary deductions to ensure your blind fits perfectly!

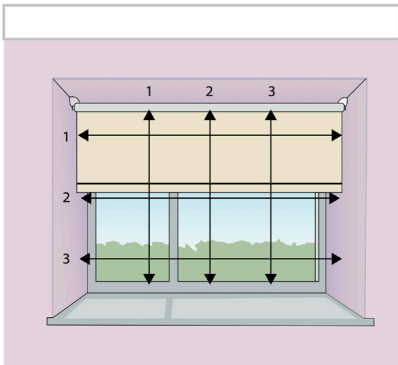


Outside Recess

Using a steel tape measure, take a measurement in mm across the **width** and the **drop** of the **area you want the blind to cover**.

Enter these sizes online and choose '**blind size**' in the options.

If you are measuring for a Roller Blind, you will need to choose '**cloth size**'. For a Standard Roller Blind, the brackets will extend 35mm outside the cloth size.

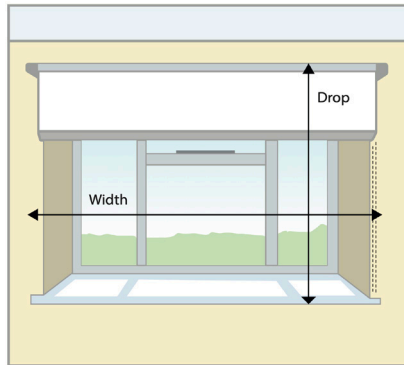

Install Height

Another measurement that is required is the 'Install Height'. This is the measurement from the floor to the top of the blind.

This measurement is required to ensure your blinds comply with Child Safety regulations.

Bay Windows

You can find a Bay Window Measuring Guide on our website here - www.directorderblinds.co.uk/how-to-measure-blinds

Still stuck?

If you have any questions, whether it be about measuring or the best blind for your window, feel free to get in touch! Send us over an email with photos of your window and we will advise you on the best available solutions - sales@directorderblinds.co.uk